

SAM4S ER-260/265

Electronic Cash Register

Quick Setup Guide

For EPROM version **05.000** and later




1 Get Ready

Unpack the Cash Register

Remove the cash register from the packaging. Locate the following items:



- 1 roll of paper (Reorder T5750)
- 1 rewind spindle
- 1 User Manual
- 1 set of keys (6 pairs, 12 keys in total)

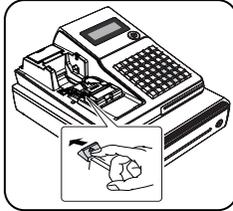

Loading Paper

The register has a built-in thermal printer and a 57mm thermal paper roll. The printer can be used as a receipt printer or a journal printer.

- Remove the printer cover
- Push the yellow cap lever and lift up the platen roller
- Load the paper and close the platen roller (Top)
- Close the platen roller firmly.
- For use as journal (bottom).

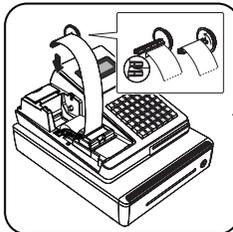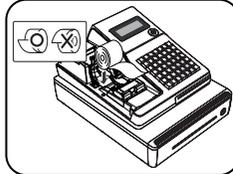


| | | | | | | |
|------------|-----------|-----|--------|--------|------|-----------|
| PAPER FEED | ADD CHECK | TAX | #/NS | CLERK | RA | PO |
| - | -% | +% | C/CONV | RETURN | VOID | CANCEL |
| 1 | 6 | 11 | CLEAR | X/TIME | PLU | EFTPOS |
| 2 | 7 | 12 | 7 | 8 | 9 | CHECK |
| 3 | 8 | 13 | 4 | 5 | 6 | SUB TOTAL |
| 4 | 9 | 14 | 1 | 2 | 3 | CASH/TEND |
| 5 | 10 | 15 | 0 | 00 | . | |

2 RAM All Clear

RAM (Memory) All Clear - Reset

- A "Ram all Clear" will reset the register back to the Factory default settings. It is strongly recommended that a "Ram all Clear" is performed on all new registers **before use**.
- Before switching on the register use a **C** key and turn to **S-Mode** (a hidden position after **PGM-Mode**)
- Hold down the **SUBTOTAL** button
- Turn the power switch **ON**
- After the **beep** release the **SUBTOTAL** button and follow this by pressing the
- **PAPER FEED** , **Dept 5** , **PO** , and then the **CASH/TEND** button in sequence. The display will show " = = = = = = = = = = ". At the end of this step, "RAM ALL CLEAR OK!" will print on the receipt.
- The Display will then show "PLU INI...", press **CASH/TEND** and the display will show " = = = = C C = = = = = ". When "PLU INITIALIZATION COMPLETE" is printed on the receipt the "RAM All Clear" procedure is complete.

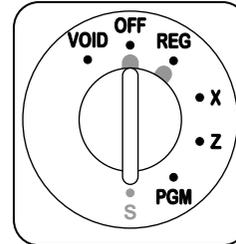

REGISTER DEFAULT SETTINGS.

Tax 1

- Rename to **GST**
- **10.000% VAT (Value Added Tax)**

Departments

- **10% GST**
- **Preset Price (0.00)**
- **Override Preset Price**

Plu's

- **10% GST**
- **Preset Price (0.00)**
- **All Plu's Linked to Department 1.**

3 Programming


Descriptor Programming Methods

On the **ER-260/265**, there are two different program methods - **Alpha Overlay** or **Two Digit Code**.

| | | | | | | |
|---|---|---|-------|--------|-----|-----------|
| | M | T | V | X | Z | BACK |
| F | L | S | U | W | Y | SPACE |
| E | K | R | CLEAR | X/TIME | PLU | DBL |
| D | J | Q | 7 | 8 | 9 | CHECK |
| C | I | P | 4 | 5 | 6 | |
| B | H | O | 1 | 2 | 3 | CASH/TEND |
| A | G | N | 0 | | . | |

Receipt Logo Descriptor Programming

- use either a **P** key or **C** key and turn to **PGM-Mode**
- Press **X/TIME** button
- Enter up to **32** characters of descriptor for the line
- Press **X/TIME** button again
- Refer to table below, enter 2 digit line code..

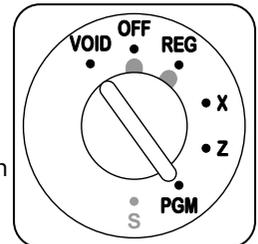

| Code | Preamble | Code | Postamble |
|------|----------------------|------|----------------------|
| 11 | 1 st Line | 21 | 1 st Line |
| 12 | 2 nd Line | 22 | 2 nd Line |
| 13 | 3 rd Line | 23 | 3 rd Line |
| 14 | 4 th Line | 24 | 4 th Line |
| 15 | 5 th Line | 25 | 5 th Line |
| 16 | 6 th Line | 26 | 6 th Line |

- Press **CHECK** button
- Repeat for next line
- **CASH** button to finalised program

3 Programming (Continue)

Department Descriptor Programming

- Use either a **P** key or **C** key and turn to **PGM-Mode**
- Press **X/TIME** button
- Enter up to **18** characters of descriptor for the line
- Press **X/TIME** button again
- Press the Department key that the descriptor is for
- Repeat for next Department or **CASH** button to finalise programming

PLU Descriptor Programming

- Use either a **P** key or **C** key and turn to **PGM-Mode**
- Press **X/TIME** button
- Enter up to **18** characters of descriptor for the line
- Press **X/TIME** button again
- Enter PLU number from the numeric pad then **PLU** button that the descriptor is for
- Repeat for next PLU or **CASH** button to finalise programming

Department Entry Limit or Price Programming

- Use either a **P** key or **C** key and turn to **PGM-Mode**
- Enter the price (without decimal point) from the numeric pad
- Press the Department key that the entry limit or price is for
- Repeat for next Department or **CASH** button to finalise programming

PLU Entry Limit or Price Programming

- Use either a **P** key or **C** key and turn to **PGM-Mode**
- Enter PLU number from the numeric pad then the **PLU** button that the entry limit or price is for
- Enter the price (without decimal point) from the numeric pad
- Press **X/TIME** button
- Repeat for next PLU or **CASH** button to finalise programming


Note: For **Entry Limit** or **Preset Price**, check the preset status setting of the Department or PLU. For detail, please refer to **Department Programming** and **PLU (Price Look Up) Programming** in the **Operation and Program Manual**

4 Reporting

The **ER-260/265** has two reporting modes, one for printing out the information without resetting any figures; this is referred to as the **X-Mode**

The second is for printing and resetting the figures back to zero ready for the next day (**End of Day**), this is referred to as the **Z-Mode**.

- Use either a **Z**, **P** or **C** Key and turn to **X-Mode** or **Z-Mode**.
- Press one of the buttons from the table below to print out the required report

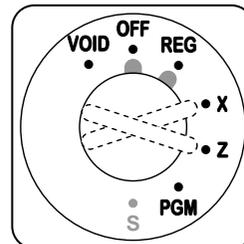

| Button | Mode | Report |
|---------------|--------|--------------------------|
| CASH | X or Z | Financial |
| CHARGE | X or Z | Period-to-Date Financial |
| PLU | X or Z | PLU |
| X/TIME | X or Z | Hourly Sales |
| CLERK | X or Z | Clerk |

The **ER-260/265** also has 800 lines (fixed) Electronic Journal (**EJ**) built-in. It records transactions which can be printed for inspection. Please check System Option #23, #24 and #26 in the **Operation and Program Manual** for **EJ** configuration.



To print **EJ** record.

- Use either a **Z**, **P** or **C** Key and turn to **X-Mode**

Enter **3 0 0 CASH**

To erase the **EJ** manually.


- Use either a **Z** key, **P** key or **C** Key and turn to **Z-Mode**
- Enter **3 9 9 CASH**

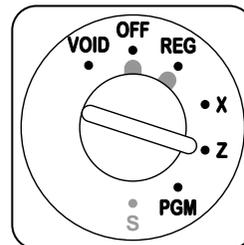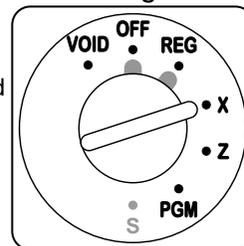

5 Miscellaneous Information


Date Programming

- Use either a **P** key or **C** key and turn to the **PGM-Mode**
- Enter two digits for the Day the Month and the Year in **DDMMYY** format.
For example, for **15 Oct 2011** enter **1 5 1 0 1 1**
- Press the **X/TIME** button
- Press the **CASH** button to finalise programming

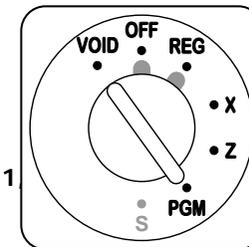

TIME PROGRAMMING

- Use either a **P** key or **C** key and turn to the **PGM-Mode**
- Enter two digits for the Hour and Minutes in **HHMM** in **24 hours** format.
For example, for **3:25pm**, enter **1 5 2 5**
- Press the **X/TIME** button
- Press the **CASH** button to finalise programming

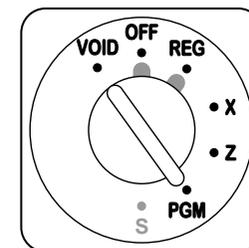


PC On-Line Mode for PC

Communication

PC On-Line mode on **ER-260/265** is turned on manually. To do so..

- Use a **C** key and turn to **S-Mode** (a hidden position after **PGM-Mode**)
- Press **RA** button

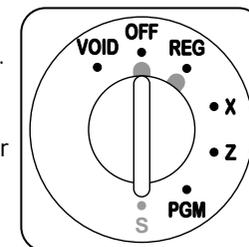

General Errors

When **ER-260/265** is beeping with a message on the display.

E1: General Error; usually a misoperation but could also be incorrect programming.

E3: Printer Error / Paper Jam; please remove paper roll and clean printer, if the problem remains, contact your dealer.

E8: No Paper; please insert new paper roll into printer

Exit ALL Error Condition's by pressing the **CLEAR** button.