

<u>Model</u>	<u>Ram Clear</u> <u>(Resets memory completely)</u>	<u>Initial Clear</u> <u>(Program Restart)</u>
ER180	<ul style="list-style-type: none"> ➤ Power off ➤ Key to S Position (6 o'clock - not print) ➤ Hold down 00 keys ➤ Power on while holding 00 keys ➤ Release 00 keys 	N/A
ER290	<ul style="list-style-type: none"> ➤ Power off ➤ Key to S Position (6 o'clock - not print) ➤ Hold down CLEAR key ➤ Power on while holding CLEAR key ➤ Release CLEAR key 	N/A
ER180T/TDL	<ul style="list-style-type: none"> ➤ Power off ➤ Key to S Position (6 o'clock - not print) ➤ Hold down CHARGE key ➤ Power on while holding CHARGE key ➤ Release CHARGE key ➤ Sequentially push the top-left-hand key, the bottom-left-hand key, the top-right-hand key, the bottom-right-hand key. 	<ul style="list-style-type: none"> ➤ Power off ➤ Key to P/PGM position ➤ Hold down Subtotal key ➤ Power on ➤ Release Subtotal key
ER26x	<ul style="list-style-type: none"> ➤ Power off ➤ Key to S Position (6 o'clock - not print) ➤ Hold down SUBTOTAL key ➤ Power on while holding SUBTOTAL key ➤ Release SUBTOTAL key ➤ Sequentially push the top-left-hand key, the bottom-left-hand key, the top-right-hand key, the bottom-right-hand key ➤ Push CASH key when see PLU INI... on display 	<ul style="list-style-type: none"> ➤ Power off ➤ Key to S position (6 o'clock - not print) ➤ Hold down TEND (CASH for ER260) key ➤ Power on ➤ Release TEND (CASH for ER260) key
ER230B	<ul style="list-style-type: none"> ➤ Power off ➤ Hold down CHECK key ➤ Power on while holding CHECK key ➤ Release CHECK key ➤ Sequentially push the top-left-hand key, the bottom-left-hand key, the top-right-hand key, the bottom-right-hand key 	<ul style="list-style-type: none"> ➤ Power off ➤ Hold down Subtotal key ➤ Power on ➤ Release Subtotal key
ER380/M/MB ER390M/MB ER420M ER430M ER52xx/M ER650 ER600 ER900 SPS300	<ul style="list-style-type: none"> ➤ Power off ➤ Key to S Position (6 o'clock - not print) ➤ Hold down CHECK key ➤ Power on while holding CHECK key ➤ Release CHECK key ➤ Sequentially push the top-left-hand key, the bottom-left-hand key, the top-right-hand key, the bottom-right-hand key 	<ul style="list-style-type: none"> ➤ Power off ➤ Key to P/PGM position ➤ Hold down Subtotal key ➤ Power on ➤ Release Subtotal key
SPS530FT	<ul style="list-style-type: none"> ➤ Power off ➤ Key to S Position (6 o'clock - not print) ➤ Hold down MISC TEND 1 key ➤ Power on while holding MISC TEND 1 key ➤ Keep holding MISC TEND 1 key until hear beeps ➤ Release MISC TEND 1 key ➤ Sequentially push the top-left-hand key, the bottom-left-hand key, the top-right-hand key, the bottom-right-hand key 	<ul style="list-style-type: none"> ➤ Power off ➤ Power on

SPS2000/B	<ul style="list-style-type: none"> ➤ Power off from power switch on the button of the machine ➤ Hold down front panel (power) button ➤ Power on (from the power switch on the button of the machine) while holding front panel (power) button ➤ Enter password - 1287 ➤ Tap All Clear button ➤ Machine will restart 	<ul style="list-style-type: none"> ➤ Power off ➤ Power on
-----------	--	---

Discontinued Models

<u>Model</u>	<u>Ram Clear</u> (Resets memory completely)	<u>Initial Clear</u> (Program Restart)
ER100 ER150	<ul style="list-style-type: none"> ➤ Power off ➤ Turn to P Position ➤ Hold down C & 00 keys ➤ Power on ➤ Release C & 00 keys 	N/A
ER220	<ul style="list-style-type: none"> ➤ Turn to PGM ➤ Press sequentially 9, 2, 7, 6, Charge & RF 	N/A
ER250	<ul style="list-style-type: none"> ➤ Power off ➤ Turn to P Position ➤ Hold down together - %, VD, & #/NS keys ➤ Power on ➤ Release - %, VD & #/NS keys 	N/A
ER550	<ul style="list-style-type: none"> ➤ Power off ➤ Key to S Position (6 o'clock - not print) ➤ Hold down 00 key ➤ Power on ➤ Hold down 00 key for 5 seconds then release 	N/A
ER700	<ul style="list-style-type: none"> ➤ Power off ➤ Key to S Position (6 o'clock - not print) ➤ Hold down CLEAR key ➤ Power on ➤ Release CLEAR key 	<ul style="list-style-type: none"> ➤ Power off ➤ Key to S Position (6 o'clock - not print) ➤ Hold down 00 key ➤ Power on ➤ Release 00 key
ER4615 ER5100	<ul style="list-style-type: none"> ➤ Power off ➤ Key to S Position (6 o'clock - not print) ➤ Hold down 00 keys ➤ Power on while holding 00 keys ➤ Release 00 keys 	<ul style="list-style-type: none"> ➤ Power off ➤ Key to P/PGM position ➤ Hold down Subtotal key ➤ Power on ➤ Release Subtotal key
SER6500 SER6500II	<ul style="list-style-type: none"> ➤ Power off ➤ Key to S Position (6 o'clock - not print) ➤ Hold down CHECK key ➤ Power on while holding CHECK key ➤ Release CHECK key 	<ul style="list-style-type: none"> ➤ Power off ➤ Key to P/PGM position ➤ Hold down CASH key ➤ Power on ➤ Release CASH key
SPS1000 (YCR V. 3) SER7000	<ul style="list-style-type: none"> ➤ Power off ➤ Key to S Position (6 o'clock - not print) ➤ Hold down CHEQUE/CHECK key ➤ Power on while holding CHEQUE/CHECK key ➤ Release CHEQUE/CHECK key ➤ Sequentially push the top-left-hand key, the bottom-left-hand key, the top-right-hand key, the bottom-right-hand key 	<ul style="list-style-type: none"> ➤ Power off ➤ Key to P/PGM position ➤ Hold down CASH key ➤ Power on ➤ Release CASH key